
# 2nd Display

- A Please turn it on after connecting all the option items.
- rear cover.





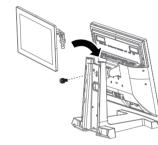

rear cover.


- Please insert cable into display port out
   Please assemble I/O cover and stand of I/O ports.

# Card Reader

 Please insert Card Reader at the groove in monitor to the arrow direction (1) after disassembling I/O cover and set it well by pushing to the arrow direction (2).





2 Please close I/O cover after inserting the cable into COM6/USB port of I/O ports.

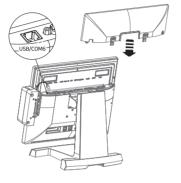

# SSD Replacement

- A Please turn the power off after finishing SSD replacement.
- Please push the monitor up and pull out the SSD in Disk Tray by holding handle of Disk Tray.
- When SSD is replaced, please separate SSD by pushing it up through the hole of Tray.
- \* Please be cautious on direction when it is assembled.

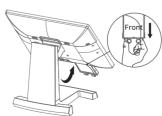

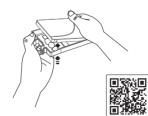

Specification Rev. 3.1EN(202303)

Model	S-200	G-200	E-200			
System						
Processor	7th or 8th Generation Intel® Core™ i3, i5, i7 Processors	Intel® Celeron® Quad-core Processor J4125 2.0GHz/2.7GHz	Intel® Celeron® Quad-core Processor J6412 2.0GHz/2.6GH			
Chipset/BIOS	Intel® Kaby Lake SoC / AMI	Intel® Gemini Lake SoC / AMI	Intel® Elkhart Lake SoC / AMI			
Storage	2.5" SATA III SSD 64GB (HDD 500	GB & SSD 128GB, optional)				
Memory	4GB SO-DIMM					
	DDR4 2133MHz x 2 (Max 32GB, optional)	DDR4 2400MHz x 1 (Max 16GB, optional)	DDR4 2666MHz~3200MHz x 1 (Max 32GB, optional)			
Graphics	Intel® HD Graphics 620 / Intel® Iris® Plus Graphics 640	Intel® UHD Graphics 600	Intel® UHD Graphics for 10th Gen Intel® Processors			
Expansion Slot	1 x mini PCI-e	1 x m.2 NVMe, 1 x m.2 WiFi & Bluet	ooth (optional)			
Multi Mointor	3 (# of Displays Supported) - up to	3 monitors (optional)				
OS	Windows 10 IoT Enterprise					
Display & Touch						
Display Type	15" LCD with WLED backlight	t(1024 x 768 resolution) *E-Serie	es is 15,6" FHD (16:9) Available			
Touch	True-Flat Capacitive 10 Point	t Multi-Touch				
I/O Interfaces(Rear To	p & Bottom Ports)					
USB	6 x USB 3.0 (Rear Top x 2, Rear Bottom x 4) 1 x USB 2.0 (RJ11)	2 x USB 2.0 (Rear Top x 2) 4 x USB 3.0 (Rear Bottom x 4) 1 x USB 2.0 (RJ11)				
Serial						
Audio	1 x Audio-out / 3.5mm					
Display Port		USB 2.0 / Power Delivery +12V) DVI, VGA Monitor by Converter Ca	able.			
LAN	1 x RJ45(Base-T 10/100/1000 Ethernet)					
Speaker(optional)	1W x 1	3W x 1				
Peripheral Options						
2nd Display DisplayPort		0(1024 x 768 Resolution) 5" LCD with Capacitive Touch a kd Multi Display Function by DP MST H				
Customer Display(CDP)	FSTN LCD Type(20 columns x 2	lines)				
Card Reader (MSR/SCR)	Smart Card Reader: ISO/IEC7816 EMV Level 1 Magnetic Stripe Reader: ISO 7811 ID-1 All Tracks • Interface: USB(HID) and RS232C(COM6)					
Dallas Reader	Dallas Reader(i-button): 6 Characters/Prefix and Suffix *Interface: USB(HID) and RS232C(COM6)					
Physical Dimension	,					
Dimernsion(W x D x H)	362 X 237 X 352 (mm)					
Weight	5.0 Kg					
Environment	3.0 Ng					
Power Supply	DC 12V/5A (AC 100V~240V,	60///				
Temperature	Operating: 0~50°C at 10% to 90% Humidity					
	1 - 1					
Certifications	CE, CB, FCC, KC					

consent under the Copyright Act. Specifications in the user manual are subject to change without prior notice.

# **Installation Guide**

S-200 | G-200 | E-200

All-in-One POS System





Installation Guide 6 Installation Guide 7 Installation Guide 8

# Safety Precautions

### Be sure to read the Safety Precautions before using the POS system.

- $\bullet$  Before connecting, make sure the operating voltage is AC100  $\sim$  240V. Otherwise, you may damage the system.
- · Do not install the system in an extremely hot or cold place.
- · Avoid exposing the product in direct sunlight or in an enclosed space for a long period of time.
- Be careful not to place the system near other high-frequency electromagnetic devices; there is a strong possibility it will lead to a system malfunction or system error.
- Do not place heavy objects on the system.
- · Please do not allow external substances to be contaminated inside the system.
- · Do not change the motherboard's battery by yourself. It can damage the system.
- · Before disassembling the system, disconnect all power and cables.
- Do not remove or repair the system by yourself. We highly recommend an engineer's assistance or an experienced technician to open the system, especially the LCD and touch panels which could be easily broken.
- · An electrical outlet is needed near the device and it should be easily accessible.
- · Risk of explosion if battery is replaced by an incorrect type.
- Replace only with the same type of batteries recommended by the manufacturer.
- This device complies with the EMC (Electromagnetic Compatibility) Regulations, for business purposes. Distributors and users are advised of this matter.
- Do not use excessive force when using or pressing the touch panel. Do not use objects with sharp edges on the touch panel.
- · Please exchange the equipment if you mistakenly sold or purchased this product.
- Cleaning and Maintenance is relevantly necessary for POS terminal to be operated well.

### ▲ POS Terminal Security Guideline

#### Operating System Security


System-provided and managed by the operating system's default security settings must be configured.

### ▲ Touch Screen Security Guideline

#### Please take special care with the touch panel as it is vulnerable to scratches.

- Do not use excessive force when using or pressing the touch panel. Do not use objects with sharp edges on the touch panel.
- · Be careful not to spill any liquid on the screen.
- · Turn off the power switch and unpluq all cables before cleaning the screen and/or the system.
- · Use a soft, clean, dry cloth for cleaning the system, and do not use chemicals or detergents,


# Package Contents

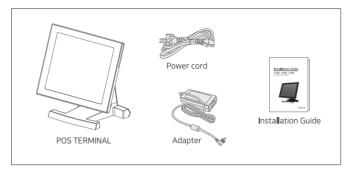

\* Component images are for reference only and may vary by model and option.

# Configuration

### Front/Side/Rear view

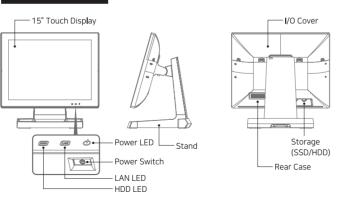

# I/O Ports

### I/O Cover Disassembly

- A Please proceed with I/O ports connection after powering off the system.
- 1/0 cover will be disassembled by pushing the "PUSH" part of both sides.
- Please connect the I/O ports after checking the locations of upper I/O and lower I/O ports.



Upper I/O ports



Lower I/O ports

Description


DisplayPort

♠ DC 12V

Serial(DB9) - COM1

Serial(DB9) - COM3

Serial(RJ45/RJ50) - COM2

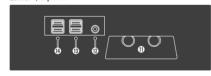

※ I/O ports can be changed based on models/specifications/options.	
* ①, ②, ③, ⑧, ⑨ special-purpose port	

From the RJ45 port supply to power connector used by RJ50 plug.

(3) LAN

Serial(RJ45/RJ50) - COM4

Card Reader(RJ11) - USB/COM6

Serial(DB9) - COM5

· · · · · · · · · · · · · · · · · · ·				
	Signal Name	PJ45		
	DCD	1		
	DSR	2		
	TXD	3		
0 ~ 0	RXD	4		
0 0	RTS	5		
<b>೧</b> ∼ <b>(3</b> ): RJ45	CTS	6		
<b>0</b> ~ <b>(</b> 0 : RJ50	GND	7		
<b>.</b> 10350	DTR	8		

SSD/HDD

Audio

(B) USB 3/4

**(1)** USB 5/6


R 145 Pin Man Assignments

ystem	Connection	and	Power	on

Please install the system referring to video clip thru QR code written in manual.

#### Power Cord Connection

- A Please connect power addptor DC jack and power cord by turns after all option items are connected.
- 1/O cover will be disassembled by pushing the "PUSH" part of both sides.
- Please disassemble it by pushing up stand rear case.
- Please insert power adaptor cable by turning it into DC 12V port at upper I/O ports.
- Please connect power cord after assembling it in a reverse way of disassemble.

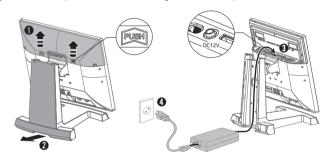

#### Power on

A Please turn the power on after installing all optional items.


The power cord connects 220V (110V) power after fastening the DC plug to the mainbody of POS. Power Supply Indicator is located on the lower right side of the monitor. When power is connected, the LED will light up. Each LED lamp will indicate the operation status.

HDD LED: Operation mode (GREEN)

 LAN LED: LAN Connection (RED)

Power LED: Power Connection (BLUE)

Power Switch

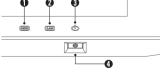

Installation Guide 2 Installation Guide 3 Installation Guide 4 Installation Guide 5